



### **4700 SLIDING** Structural glued of glass

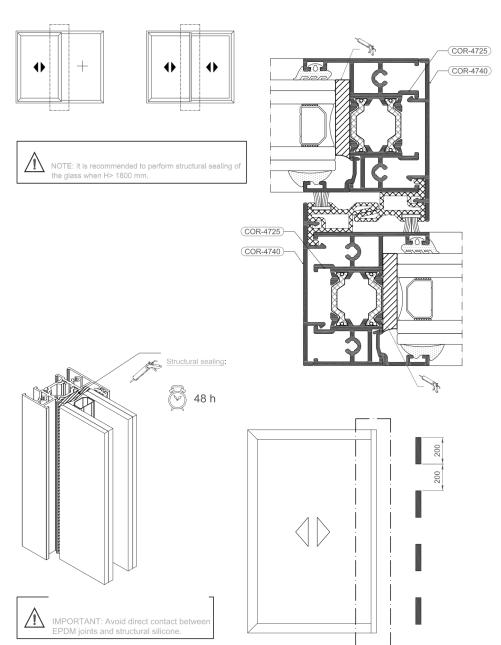




## **4700 SLIDING**Fabrication details

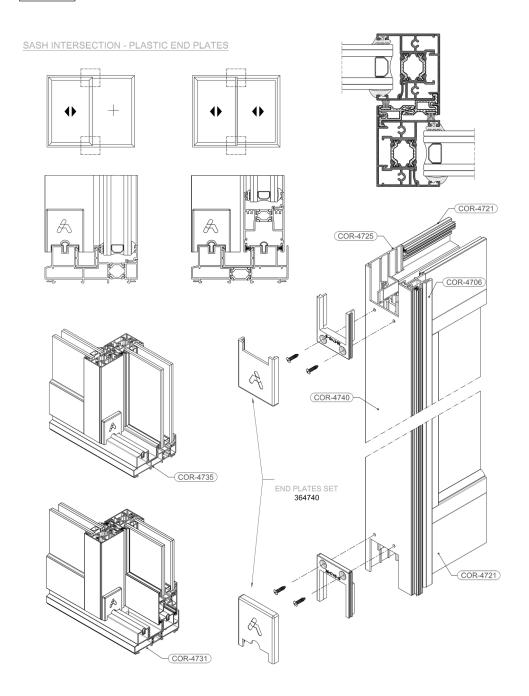




**4700 SLIDING**Fabrication details


#### OPENING LIMITER CAP ON SASH - TWO RAIL SLIDING










LIMITER CAP 264260




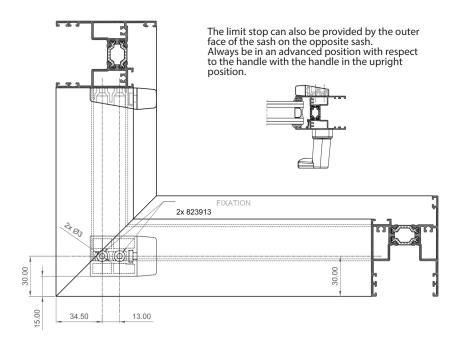



# THEIR APPLICATION ADVISABLE LAYOUT FOR THE WEDGES ACCORDING TO





Notes: The wedges must be placed towards the inside of the bearing points

#### Sub sill installation

**NOTE: -** Check the sill for drainage slots, make sure they are clean and not blocked by any debris, clean if necessary.

- · Using low modulus silicone seal the ends of the sill section.
- Install the end caps (ref DBA1-203N) as shown below.

